

BRAUN ORAL-B PRO 1000 MANUAL



Available languages

-  EN
-  FR

Quick Links

- Connecting and Charging
- Using Your Toothbrush
- Removing Batteries
- Cleaning Recommendations

Table of Contents

- IMPORTANT SAFEGUARDS
 - Connecting and charging
 - Using your toothbrush
 - Brush heads
 - Cleaning recommendations
 - Environmental Notice
 - Removing batteries
- FOR USA ONLY
 - Branchement et chargement
 - Brossage des dents
 - Recommandations d'entretien
 - Avis environnemental
- Other ManualsLib Projects



powered
by **BRAUN**

PRO 1000
TRIACTION 1000



91200965

English 3

Français 10

Internet:

www.oralb.com

www.oralb.ca

www.braun.com

www.service.braun.com










Braun GmbH
Frankfurter Strasse 145
61476 Kronberg
Germany/Allemagne

Charger type 3757

Type de chargeur 3757

Handle type 3756

Type de manche 3756

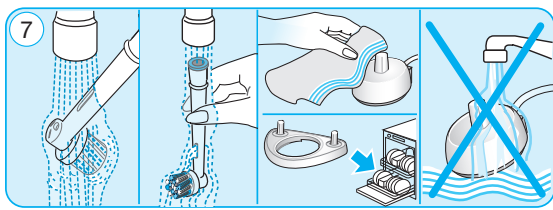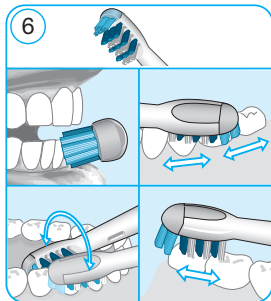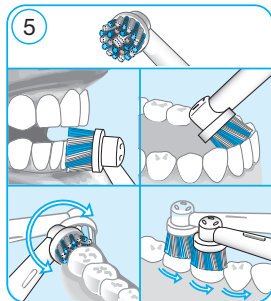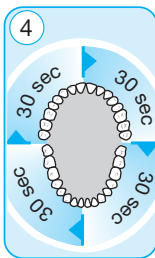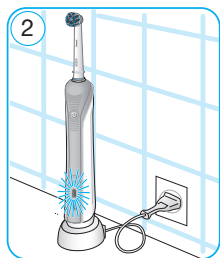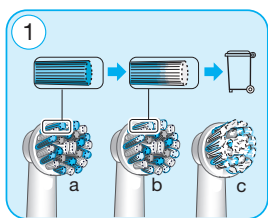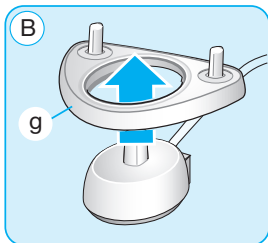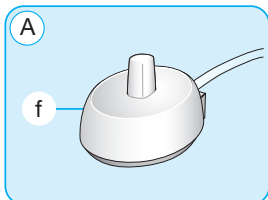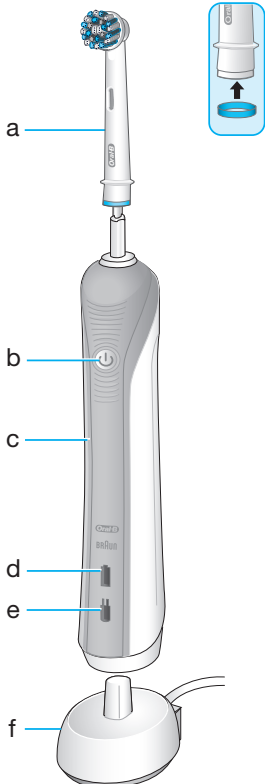

IMPORTANT SAFEGUARDS

Your **Oral-B®** toothbrush has been carefully designed to offer you and your family a unique brushing experience that is both safe and effective.

Read all instructions before using.

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

DANGER

In order to reduce the risk of electrocution:

1. Do not place or store the charger where it can fall or be pulled into a tub or sink.
2. Do not place the charger in water or other liquid.
3. Do not reach for a charger that has fallen into water. Unplug immediately.
4. Do not use while bathing.

WARNING

To reduce the risk of burns, electrocution, fire or injury:

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Keep cord away from heated surfaces.
4. Never drop the appliance or insert any object into any opening of the appliance.
5. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or if it has been dropped into water. If any of these occur, please contact a service center and return the product for examination and repair.

IMPORTANT

1. Periodically check the cord for damage. If cord is damaged, take the charging unit to an Oral-B Service Center. A damaged or non-functioning unit should no longer be used.
2. If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
3. Do not touch the power plug with wet hands. This can cause an electric shock.
4. When unplugging, always hold the power plug instead of the cord.
5. Do not modify or repair the product. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Service Center. Do not disassemble the product except when disposing of the battery.
6. When taking out the battery for disposal, use caution not to short the positive (+) and negative (–) terminals.
7. This product is not intended for use by children under age three.
8. This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.

CAUTION

If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.

SAVE THESE INSTRUCTIONS

English

Specifications

For voltage specifications refer to the bottom of the charging unit.

Description

- a Brush head
- b On/off button (mode selection)
- c Handle
- d Charge indicator light
- e Low charge indicator light
- f Basic charger
- g Brush head holder (depending on model)

Connecting and charging

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the basic charger (f) or the assembled charging unit (picture B, page 2) into an electrical outlet and place the toothbrush handle (c) on the charging unit.
- The green charge indicator light (d) flashes while the handle is being charged. Once it is fully charged, the light turns off. A full charge can take up to 22 hours and enables up to seven days of regular brushing (twice a day, 2 minutes) (picture 2, page 2).
Note: After deep discharge, the green light might not flash immediately; it can take up to 10–15 minutes.
- When the rechargeable battery is low, the red low charge indicator light (e) starts flashing after turning off the toothbrush.
- For everyday use, the toothbrush handle can be stored on the charging unit to maintain it at full power. Overcharging is impossible.
- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Using your toothbrush

Wet brush head and apply any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the appliance (picture 3, page 2). When brushing your teeth with one of the **Oral-B oscillating-rotating brush heads** guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface (picture 5, page 2).

When using the Oral-B «**Deep Sweep**» brush head place the toothbrush bristles against the teeth at a slight angle towards the gumline. Apply light pressure and start brushing in back and forth motions, just like you would do with a manual toothbrush (picture 6, page 2).

With any brush head start brushing the outsides, then the insides and finally the chewing surfaces. Brush all four quadrants of your mouth equally.

You may also consult your dentist or dental hygienist about the right technique for you.

In the first few days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and gums, Oral-B recommends using the «Sensitive» mode (optional in combination with the Oral-B Sensitive Gum Care brush head).

Brushing modes (depending on model)

- «Daily Clean» – Exceptional mouth cleaning.
- «Sensitive» – Gentle, yet thorough cleaning for sensitive areas.
- «Whitening» – Exceptional whitening for occasional or everyday use.

How to switch between modes:

Your toothbrush automatically starts in the «Daily Clean» mode.

To switch to the other mode, press the on/off button. If you wish to

turn off your toothbrush from the «Daily Clean» mode, push and hold down the on/off button until the motor stops.

Pressure Sensor

To promote optimal brushing your toothbrush has a pressure control feature installed. If too much pressure is applied, the movement of the brush head will continue but the pulsation will stop. In addition you will also hear a different sound while brushing.

Professional Timer

A short stuttering sound at 30-second intervals reminds you to brush all four quadrants of your mouth equally (picture 4, page 2). A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time. The elapsed brushing time is memorized when the handle is briefly switched off during brushing. When pausing longer than 30 seconds the timer resets.

Brush heads


Oral-B offers you a variety of different Oral-B brush heads that fit your Oral-B toothbrush handle.

Our **oscillating-rotating brush heads** can be used for tooth-by-tooth precision cleaning.




Oral-B CrossAction brush head

Our most advanced brush head. Angled bristles for a precise clean. Lifts and powers away plaque.



Oral-B Precision Clean brush head

provides effective and gentle cleaning action for both teeth and gums. The brush head cups each tooth with longer and denser bristles and reach deep between teeth at the same time.



Oral-B FlossAction brush head

features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.



Oral-B 3D White brush head

features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B «3D White» brush head.



Oral-B Sensitive Gum Care brush head

provides thorough cleaning for sensitive teeth and gums. It has an extra soft bristle texture that is gentle on teeth and gums.




Oral-B Ortho brush head

with special tufting pattern thoroughly cleans and gently removes plaque from teeth with braces.



Oral-B Power Tip brush head

is designed for cleaning between teeth as well as around bridges, crowns and implants. Position the Power Tip at a 45 degree angle to the gumline. Slowly guide the Power Tip along the gumline, pausing between teeth for excellent results.



Oral-B Deep Sweep brush head
features triple zone cleaning action for outstanding plaque removal, even in between teeth.

The **dynamic «Deep Sweep»** brush head can be used with all common brushing techniques.

Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the color will fade halfway down approximately in a 3-month period. If the bristles splay before the color recedes, you may exert too much pressure on teeth and gums (picture 1, page 2).

We do not recommend using the Oral-B FlossAction or Oral-B 3D White brush head with braces. You may use the Oral-B Ortho brush head, specifically designed to clean around braces and wires.

Cleaning recommendations

After brushing, rinse your brush head carefully under running water for some seconds with the handle switched on. Switch off the handle and remove the brush head. Clean both parts separately under running water; then wipe them dry before reassembling the toothbrush. Disassemble the charging unit before cleaning. The brush head holder (g) is dishwasher-safe. Never place the charger in dishwasher or water. It should be cleaned with a damp cloth only (picture 7, page 2).

Environmental Notice


Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Removing batteries

Handle battery

At the end of the product's useful life, open the handle as shown, remove the rechargeable battery and dispose of it according to local environmental regulations.

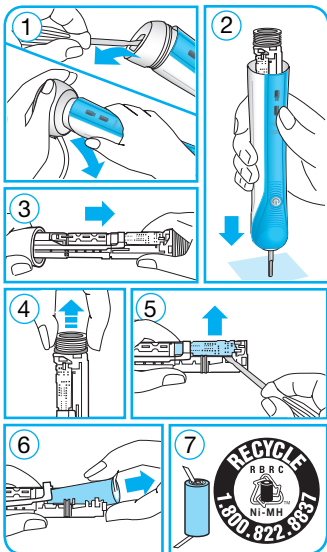

Caution! Opening the handle will destroy the appliance and invalidate the warranty.

Subject to change without notice.

Satisfaction Guaranteed or Your Money Back!

Try your Oral-B brush for 60 days, starting from the day of purchase. If you are not 100% satisfied, receive a full refund via a pre-paid card. No questions asked. For a full refund, please return your product along with your name, address, contact phone number and the original cash register receipt indicating purchase price and date to the address below.

U.S. only:

Oral-B 60 Day Satisfaction Guarantee
4608 Appliance Drive
Suite 2
Belcamp, MD 21017

Canada only:

Attention: 60-Day Challenge
Braun MBG
PO Box 12060
Saint John, NB
E2L 5E7

Your Oral-B toothbrush must be returned in its original packaging and be postmarked no later than 60 days after the date of purchase. Please allow 6–8 weeks for handling. The shipment cost to return the product is the responsibility of the consumer.

Sorry: No refunds will be made for any Oral-B product damaged by accident, neglect, unreasonable use or lost in the post.

Terms and conditions apply. For further details please contact our customer service.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

FOR USA ONLY

Limited 2-Year Warranty

Oral-B warrants this appliance to be free of defects in material and workmanship for a period of two years from the date of original purchase at retail.

If the appliance exhibits such a defect, Oral-B will, at its option, repair or replace it without cost for parts and labor. The product must be carried in or shipped, prepaid and insured (recommended), to an authorized Oral-B Service Center. Proof of date of original purchase is required.

The cost to ship the product to an authorized Service Center is the responsibility of the consumer, the cost to return the product to the consumer is the responsibility of Oral-B. This warranty does not cover finishes or normal wear, nor does it cover damage resulting from accident, misuse, dirt, water, tampering, unreasonable use, service performed or attempted by unauthorized service agencies, failure to provide reasonable and necessary maintenance, including recharging, or units that have been modified or used for commercial purposes.

Please also read our additional warranty statements:

Warranty replacement brush heads on page 7.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL ORAL-B BE RESPONSIBLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state.

How to obtain service in the USA

Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To obtain service:

- A. Carry the product in to the authorized Oral-B Service Center of your choice or,
- B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B replacement parts and accessories:
Contact an authorized Oral-B Service Center.

Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To order original Oral-B replacement parts and accessories (including replacement brush heads) by phone:
Please call 1-800-566-7252.

To speak to an Oral-B Consumer Service Representative:
Please call 1-800-566-7252.

FOR CANADA ONLY

Limited 2-Year Warranty

In the event this appliance fails to function within the specified warranty period because of defects in material or workmanship, and the consumer returns the unit to an authorized service center, Braun Canada will, at its option either repair or replace the unit without additional charge to the consumer. This warranty does not cover any product which has been damaged by dropping, tampering, servicing performed or attempted by unauthorized service agencies, misuse or abuse. This warranty excludes units which have been modified or used for commercial purposes.

To the extent allowed by law, Braun Canada shall not be responsible for loss of the product, loss of time, inconvenience, commercial loss, special or consequential damages. The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in applicable provincial legislation.

Please also read our additional warranty statements:

Warranty replacement brush heads on page 7.

How to obtain service in Canada

Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To obtain service:

- A. Carry the product in to the authorized Oral-B Service Center of your choice or,
- B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B replacement parts & accessories:

Contact an authorized Oral-B Service Center.

Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To speak to an Oral-B Service Representative:

Please call 1-800-566-7252.

CONSIGNES DE SÉCURITÉ IMPORTANTES

Votre brosse à dents **Oral-B®** a été conçue avec soin pour vous offrir, ainsi qu'à votre famille, une expérience de brossage unique à la fois sûre et efficace.

Lire toutes les instructions avant d'utiliser cet appareil.

Toujours suivre les consignes de sécurité suivantes lorsqu'un appareil électrique est utilisé, surtout en présence d'un enfant :

DANGER

Pour réduire les risques d'électrocution :

1. Éviter de placer ou de ranger le chargeur à un endroit d'où il pourrait tomber ou être poussé dans la baignoire ou le lavabo.
2. Éviter d'immerger le chargeur dans l'eau ou dans tout autre liquide.
3. Ne pas tenter de récupérer le chargeur s'il est tombé dans l'eau. Le débrancher immédiatement.
4. Ne pas utiliser dans le bain ou la douche.

MISE EN GARDE

Afin de réduire les risques de brûlure, d'électrocution, d'incendie ou de blessure :

1. L'utilisation de cet appareil par un jeune enfant ou une personne handicapée, ou en présence de ces derniers, doit être faite sous supervision.
2. Ce produit est conçu pour être utilisé conformément au mode d'emploi. Ne pas utiliser d'autres accessoires que ceux recommandés par le fabricant.
3. Tenir le cordon loin des surfaces chaudes.
4. Ne jamais laisser tomber l'appareil ni introduire un objet dans un quelconque orifice de l'appareil.
5. Ne jamais utiliser ce produit si la prise ou le cordon sont endommagés, s'il ne fonctionne pas correctement, s'il est tombé, s'il a été endommagé ou s'il a été immergé dans l'eau. Si l'une de ces situations se produit, veuillez communiquer avec un centre de services et retourner le produit pour qu'il soit examiné et réparé.

IMPORTANT

1. Vérifier régulièrement le cordon d'alimentation. Si ce cordon est endommagé, apporter l'appareil dans un centre de services Oral-B. Ne pas utiliser un appareil électrique endommagé ou qui ne fonctionne plus.
2. Si l'appareil tombe, la brosette devrait être remplacée avant la prochaine utilisation et ce, même si aucun dommage n'est apparent.
3. Ne pas toucher la prise d'alimentation avec des mains mouillées. Il y a risque d'électrocution.
4. Au moment de débrancher l'appareil, toujours tirer la prise, jamais le cordon d'alimentation.
5. Ne pas modifier ou réparer le produit. Cela pourrait causer un incendie, une électrocution ou une blessure. Pour réparer l'appareil, consulter le fournisseur ou communiquer avec un centre de services Oral-B. Ne pas démonter l'appareil sauf pour retirer la pile.
6. Au moment de retirer la pile pour la jeter, faire attention de ne pas court-circuiter les bornes positive (+) et négative (-).
7. Ce produit n'est pas conçu pour les enfants de moins de trois ans.
8. Cette brosse à dents est un appareil de soins personnels et n'est pas conçue pour être utilisée avec plusieurs patients dans une pratique dentaire ou une institution.

MISE EN GARDE

Si vous suivez un traitement pour une affection buccale, consultez un professionnel des soins dentaires avant d'utiliser la brosse à dents.

CONSERVER CE MODE D'EMPLOI

Français

Spécifications

Pour connaître les spécifications électriques, consulter les renseignements imprimés sur le chargeur.

Description

- a Brossette
- b Bouton marche/arrêt (choix du mode de brossage)
- c Manche
- d Voyant lumineux de charge
- e Voyant lumineux de charge faible
- f Chargeur
- g Support pour brossettes (selon le modèle)

Branchement et chargement

Votre brosse à dents dotée d'un manche à l'épreuve de l'eau est un appareil électrique sécuritaire conçu pour être utilisé dans la salle de bains.

- Branchez le chargeur (f) (illustration B, page 2) dans une prise de courant et placez le manche de la brosse à dents (c) sur le chargeur.
- Le voyant lumineux de charge vert (d) clignote pendant le chargement. Lorsque la recharge est terminée, le témoin lumineux s'éteint. Il faut compter jusqu'à 22 heures pour une pleine charge, ce qui permet jusqu'à sept jours d'utilisation normale (2 fois par jour, pendant 2 minutes) (illustration 2, page 2).
Remarque : Après une décharge complète, le voyant vert peut ne pas clignoter immédiatement; cela peut prendre de 10 à 15 minutes.
- Lorsque la pile rechargeable est faible, le voyant lumineux de charge faible rouge (e) se met à clignoter au moment d'éteindre la brosse à dents.
- Pour une utilisation quotidienne, le manche de la brosse à dents peut être rangé sur le chargeur afin qu'il conserve une charge maximale. Il n'y a aucun risque de surcharger la pile.
- Pour assurer le rendement optimal de la pile, débranchez le chargeur et laissez le manche se décharger complètement par une utilisation régulière, au moins une fois tous les 6 mois.

Brossage des dents

Mouiller la brossette et appliquer n'importe quel dentifrice. Pour éviter les éclaboussures, placez la brosse sur vos dents avant de la mettre en marche (illustration 3, page 2). Pendant le brossage avec l'une des **brossettes oscillo-rotatives de Oral-B**, déplacez lentement la brossette d'une dent à l'autre, en brossant la surface de chaque dent durant quelques secondes (illustration 5, page 2). Pour utiliser la **brossette Oral-B « Deep Sweep »**, placez les soies de la brosse sur les dents, en l'inclinant quelque peu vers la marge gingivale. Appliquez une légère pression et commencez à brosser en effectuant des mouvements de va-et-vient, comme avec une brosse à dents manuelle (illustration 6, page 2).

Avec toute brossette, brossez d'abord les surfaces extérieures des dents, puis les surfaces intérieures, et enfin les surfaces de mastication. Brossez les quatre quadrants de la bouche de façon égale.

Vous pouvez également consulter votre dentiste ou votre hygiéniste dentaire pour savoir quelle technique vous convient le mieux.

Durant les premiers jours d'utilisation d'une brosse à dents électrique, il est possible que vos gencives saignent légèrement. En général, ces saignements devraient cesser au bout de quelques jours. S'ils persistent plus de deux semaines, veuillez consulter votre dentiste ou hygiéniste dentaire. Oral-B recommande aux gens dont les dents ou les gencives sont sensibles d'utiliser le mode « Sensible » (optionnel avec la brossette Oral-B Sensitive Gum Care).

Modes de brossage (selon le modèle)

- « Nettoyage quotidien » – Pour un nettoyage buccal exceptionnel.
- « Sensible » – Pour un nettoyage en douceur, mais complet, des zones sensibles.
- « Blanchissant » – Pour un blanchiment exceptionnel, pour usage quotidien ou occasionnel.

Pour passer d'un mode de brossage à un autre :

La brosse à dents se met automatiquement en mode « Nettoyage quotidien ». Pour passer à un autre mode, appuyez sur le bouton marche/arrêt. Si vous désirez éteindre votre brosse à dents à partir du mode « Nettoyage quotidien », appuyez sur le bouton marche/arrêt et maintenez-le enfoncé jusqu'à ce que le moteur s'arrête.

Détecteur de pression

Afin de vous offrir les meilleurs résultats possibles, votre brosse est dotée d'un dispositif de contrôle de la pression. Lorsque la pression devient trop forte, le mouvement de la brosse continue, mais la pulsation s'arrête. En plus de sentir la différence, vous pourrez également la percevoir au son pendant le brossage.

Minuteur professionnel

Un bref signal sonore entrecoupé se fait entendre toutes les 30 secondes pour vous indiquer le moment de changer de quadrant (illustration 4, page 2). À la fin des deux minutes recommandées par les dentistes, un long signal entrecoupé se fait entendre. Le temps de brossage écoulé reste mémorisé lorsque le manche est brièvement mis en arrêt pendant le brossage. Le temps est remis à zéro lorsque le manche est mis en arrêt pendant plus de 30 secondes.

Brossettes


Oral-B vous offre une variété de brosettes qui conviennent à votre manche de brosse à dents Oral-B.

Nos **brossettes oscillo-rotatives** peuvent être utilisées pour procurer un nettoyage de précision une dent à la fois.




La brosette Oral-B CrossAction

Notre brosette la plus perfectionnée. Soies inclinées pour procurer un nettoyage précis. Déloge et élimine la plaque.




La brosette Oral-B Precision Clean

nettoie doucement et efficacement les dents et les gencives. La brosette entoure chaque dent grâce à ses soies plus longues et plus compactes qui pénètrent du même coup dans les espaces interdentaires.



La brosette Oral-B FlossAction

est dotée de soies Micropulse qui enlèvent remarquablement bien la plaque dans les espaces interdentaires.



Brossette Oral-B 3D White

Met en vedette une cupule de polissage spéciale qui blanchit naturellement les dents. Veuillez noter que les enfants de moins de 12 ans ne devraient pas utiliser la brosette Oral-B « 3D White ».



La brosette Oral-B Sensitive Gum Care


procure un nettoyage en profondeur pour les dents et les gencives sensibles. Grâce à la texture très souple de ses soies, elle brosse dents et gencives tout en douceur.



La brosse Oral-B Ortho comporte des touffes de soies spécialement configurées pour nettoyer les dents en profondeur et éliminer la plaque en douceur en présence d'un appareil orthodontique.



La brosse Oral-B Power Tip est conçue pour nettoyer entre les dents et autour des ponts, des couronnes et des implants. Positionnez la brosse à un angle de 45 degrés par rapport à la marge gingivale. Pour d'excellents résultats, guidez doucement la brosse Power Tip le long de la marge gingivale, en arrêtant quelques instants entre chaque dent.



La brosse Oral-B Deep Sweep procure un nettoyage triple zone qui enlève remarquablement bien la plaque, même entre les dents.

La brosse « **Deep Sweep** » **dynamique** peut être utilisée selon toutes les techniques de brossage courantes.

La plupart des brosses Oral-B se distinguent par leurs INDICATOR® qui vous aident à évaluer quand remplacer la brosse. Lorsque la brosse est utilisée correctement, c'est-à-dire deux fois par jour pendant deux minutes chaque fois, la couleur des soies s'estompe à mi-hauteur après environ trois mois d'utilisation pour indiquer de changer la brosse. Si les soies s'aplatissent avant que la couleur ne s'estompe, c'est que vous exercez probablement une pression trop forte sur vos dents et vos gencives pendant le brossage (illustration 1, page 2).

Nous ne recommandons pas d'utiliser la brosse Oral-B FlossAction ou Oral-B 3D White si vous portez un appareil orthodontique. Vous pouvez utiliser la brosse Oral-B Ortho spécialement conçue pour nettoyer autour des broches et des fils.

Recommandations d'entretien

Après l'utilisation, rincez votre brosse sous l'eau courante pendant quelques secondes en gardant le manche en mode de marche. Éteignez le manche et retirez la brosse. Nettoyez les deux pièces séparément sous l'eau courante, puis essuyez-les avant d'assembler la brosse à nouveau. Démontez le chargeur avant de le nettoyer. Le support (g) pour brosses peut aller au lave-vaisselle. Ne jamais laver le chargeur au lave-vaisselle ou sous l'eau courante; n'utilisez qu'un linge humide pour le nettoyer (illustration 7, page 2).

Avis environnemental


Ce produit contient des piles et/ou des déchets électriques recyclables. Pour protéger l'environnement, ne pas jeter dans les ordures ménagères; déposer plutôt dans un point de collecte pour déchets électriques de votre région.



Retrait des piles

Manipulation des piles

À la fin de la vie utile du produit, ouvrir le compartiment à piles situé dans le manche tel qu'indiqué, retirer la pile et la jeter conformément aux règlements locaux.

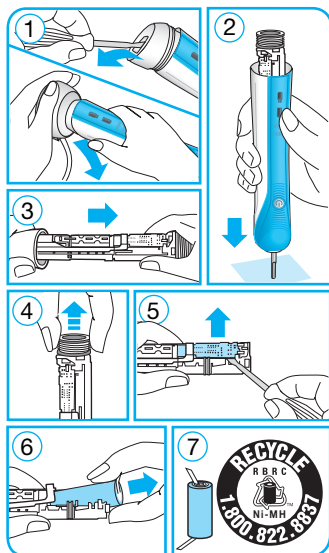

Attention ! L'ouverture du manche rend l'appareil inutilisable et invalide la garantie.

Sous réserve de modifications sans préavis.

Satisfaction garantie ou argent remis!

Essayez la brosse Oral-B pendant 60 jours, à partir de la date d'achat. Si vous n'êtes pas entièrement satisfait de ce produit, vous recevrez un remboursement complet sous forme de carte prépayée, sans aucune question de notre part. Pour obtenir un remboursement complet, veuillez retourner le produit ainsi que votre nom, adresse, numéro de téléphone et le reçu de caisse original indiquant le prix et la date de l'achat à l'adresse ci-dessous :

Pour les États-Unis seulement :

Garantie de remboursement de 60 jours Oral-B
4608 Appliance Drive
Suite 2
Belcamp, MD 21017

Pour le Canada seulement :

À l'attention de : Défi 60 jours
Braun MBG
C.P. 12060
Saint-Jean (N.-B.)
E2L 5E7

Votre brosse Oral-B doit être retournée dans son emballage original et postée au plus tard 60 jours après la date d'achat. Veuillez prévoir de 6 à 8 semaines pour le traitement de votre demande. Les frais d'expédition pour retourner le produit sont la responsabilité du consommateur.

Nous sommes désolés, aucun remboursement ne sera effectué si le produit Oral-B a été endommagé par accident, par négligence ou par un usage abusif.

Des modalités s'appliquent. Pour en savoir plus, veuillez communiquer avec notre service à la clientèle.

Garantie des brossettes de rechange

La garantie Oral-B sera annulée si les dommages causés au manche électrique rechargeable sont attribuables à l'utilisation de brossettes de rechange d'une marque autre que Oral-B.

Oral-B ne recommande pas l'utilisation de brossettes de rechange d'une marque autre que Oral-B.

- Oral-B n'a aucun contrôle sur la qualité des brossettes de rechange d'une marque autre que Oral-B. Par conséquent, nous ne pouvons garantir le rendement de nettoyage des brossettes de rechange d'une marque autre que Oral-B, comme précisé au moment de l'achat initial du manche électrique rechargeable.
- Oral-B ne peut pas garantir l'ajustement adéquat des brossettes de rechange d'une marque autre que Oral-B.
- Oral-B ne peut prédire les conséquences à long terme d'une brosse de rechange d'une marque autre que Oral-B sur l'usure du manche.

Toutes les brossettes de rechange Oral-B portent le logo Oral-B et répondent aux critères de haute qualité de Oral-B. Oral-B ne vend pas de brossettes de rechange ni de pièces de manche sous le nom d'une autre marque.

POUR LE CANADA SEULEMENT

Garantie limitée de 2 ans

Si l'appareil présente un défaut de fonctionnement, au cours de la période stipulée par la garantie, causé par un vice de matériau ou de fabrication et que le consommateur retourne l'appareil à un centre de services autorisé, Braun Canada, à sa discrétion, réparera ou remplacera l'appareil sans frais additionnels pour le consommateur. La présente garantie ne couvre pas tout produit endommagé par chute, altération, réparation ou tentative de réparation par une agence de services non autorisée, mauvais usage ou usage abusif. La présente garantie ne couvre pas les éléments qui auront été modifiés ou utilisés à des fins commerciales.

Dans la mesure permise par la loi, Braun Canada ne pourra être tenue responsable de la perte du produit, de la perte de temps, du désagrément, du préjudice commercial ou des dommages spéciaux ou indirects. Les dispositions de la présente garantie s'ajoutent aux garanties légales et autres droits et recours prévus par les lois provinciales applicables et ne modifient ou ne diminuent en rien ces garanties, droits et recours.

Veuillez également lire nos clauses de garantie supplémentaires à la section **Garantie des brossettes de rechange** à la page 15.

Comment obtenir des services au Canada

Si ce produit devait avoir besoin d'un service après-vente, composez le 1-800-566-7252 pour que l'on vous dirige vers le centre de services autorisé Oral-B le plus près de chez vous.

Pour obtenir des services :

- A. Apportez le produit au centre de services Oral-B autorisé de votre choix; ou
- B. Expédiez le produit au centre de services Oral-B autorisé de votre choix. Emballez le produit correctement. Envoyez le produit port payé et assuré (recommandé). Inclure une copie de votre preuve d'achat afin de vérifier la couverture de la garantie, s'il y a lieu.

Pour obtenir des pièces originales Oral-B et des accessoires :

Communiquez avec un centre de services autorisé Oral-B. Pour connaître le centre de services autorisé Oral-B le plus près de chez vous, veuillez composer le 1-800-566-7252.

Pour joindre un représentant du service à la clientèle Oral-B : Veuillez composer le 1-800-566-7252.

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages